

## PMF5000 Series

### MASS AIR FLOW SENSOR FOR MEDICAL DEVICES

### DESCRIPTION

Posifa designed the PMF5000 series of mass air flow sensors specifically for portable medical devices. The sensor is fast and accurate, enabling the precise amount of gas to be delivered in a pulse mode. The sensor's small footprint fits nicely inside a space-constrained housing. The stress-relieved wiring harness with pre-installed receptacle provides reliable electrical connection to the circuit board. The flow direction (forward or backward) can be customized to work with an existing system layout.

PMF5000 features Posifa's third-generation thermal flow die, benefiting from the latest innovations in microfabrication. The sensor die uses a pair of thermopiles to detect changes in temperature gradient caused by mass flow, delivering excellent signal-to-noise, and unsurpassed repeatability. The "solid state" thermal isolation structure on the sensor die eliminates the need for surface cavity or fragile membrane used in competing technologies, making the sensor resistant to clogging and pressure shock.

The PMF5000 series includes an analog version PMF5000V and a digital version PMF5000D that supports the I2C protocol.

The PMF5000 series is a proven product that has been used in quantity in FAA approved, FDA cleared, and CE certified medical devices.

### **MAXIMUM RATINGS**

Operating Temperature: -25 to 85 °C

Calibrated Temperature Range: 0 to 50 °C

Storage Temperature: -40 to 90 °C

Humidity: 0 to 100% RH, non-condensing

Shock: 100 g peak (5 drops, 3 axis)

• Common Mode Pressure: 10 psi



## **FEATURES**

- Unsurpassed performance in a robust and cost effective package
- "Solid state" sensing core (no surface cavity or fragile membrane) resistant to clogging and pressure shock
- Highly accurate (4% reading typ.)
- Fast response time (5 ms typ.)
- Linear output and temperature compensation
- Long-term stability with minimal null drift
- Elbow barb fittings\*
- Wiring harness with pre-installed receptacle
- Flow direction can be changed (forward or backward) per customer request
- Analog or digital I2C output
- Proven in FAA approved, FDA cleared. and CE certified medical devices

<sup>\*</sup> Custom fittings available





MASS AIR FLOW SENSOR FOR MEDICAL DEVICES

## **SPECIFICATIONS**

Test Condition	s: Vin=10±0	0.01VDC, Ta=2	25°C. Relati	ive Humidit	y: 40% <rh<60%< th=""></rh<60%<>
SPECIFICATIONS	MIN	TYP	MAX	UNIT	CONDITIONS
PMF5006	0		15	SLM <sup>1</sup>	
PMF5007	0		20	SLM	
PMF5008	0		40	SLM	
PMF5009	0		60	SLM	
Output Voltage (V) <sup>2</sup>	1 to 5			VDC	
Null Voltage (V)	0.95	1	1.05	VDC	
Output Count (D)	64 to 4031			Count	
Null Count	24		104	Count	
Null Drift		0.5		% F.S.	
Repeatability		0.2		% F.S.	
Accuracy <sup>3</sup>		1%		F.S.	0 to 25% F.S.
		4%		Reading	25 to 100% F.S.
Resolution (D)		12		Bit	
Response Time <sup>4</sup>		5		mSec	
Warm Up Time			30	mSec	
Supply Voltage	6		16	VDC	
Supply Current		22		mA	at 10 VDC supply

<sup>1.</sup> SLM: standard liter per minute. Standard conditions: 0 °C and 1 atmosphere.

<sup>2.</sup> V refers to the analog version of PMF5000, and D refers to the digital I2C version.

<sup>3.</sup> Maximum deviation in output from nominal over the entire calibrated flow range and temperature range. Errors include offset, full scale span, linearity, flow hysteresis, repeatability and temperature effects over the compensated temperature range.

<sup>4. 10%</sup> to 90% rise time of the flow sensor to electrically respond to any mass flow change. May be affected by the pneumatic interface.



## PMF5000 Series

MASS AIR FLOW SENSOR FOR MEDICAL DEVICES

## LINEAR OUTPUT

#### For PMF5000V

Flow Rate = [(Vout - 1 V) / 4 V] x Full Scale Flow Rate

For example, for PMF5006V full scale flow rate is 15 SLM. When Vout reads 3 V, the Flow Rate is:  $[(3 \text{ V} - 1 \text{ V})/4 \text{ V} \times 15 \text{ SLM}] = 7.5 \text{ SLM}$ 

### For PMF5000D

Flow Rate = [(Count - 64) / 3967] x Full Scale Flow Rate


For example, for PMF5006V full scale rate is 15 SLM. When digital output reads 1000, the Flow Rate is:

 $[(1000 - 64)/3967 \times 15 \text{ SLM}] = 3.54 \text{ SLM}$ 



### MASS AIR FLOW SENSOR FOR MEDICAL DEVICES

## PACKAGE DIMENSIONS

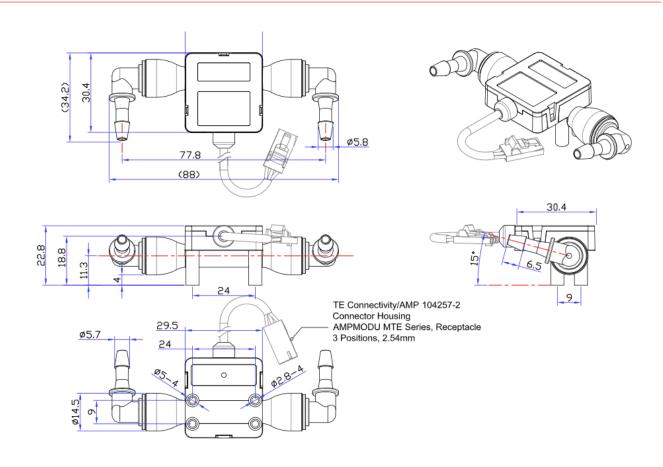

# **ELECTRICAL CONNECTION**

1	2	3	4	5
Vout	Vcc	GND	SDA	SCL

PMF5000D



5 4 3 2 1

TE 104257-4 or equivalent

PMF5000V



3 2 1

TE 104257-2 or equivalent



MASS AIR FLOW SENSOR FOR MEDICAL DEVICES

# **ORDERING INFORMATION**

PART NUMBER	SPECIFICATIONS
PMF5006V	15 SLM, 1 to 5 V, Linear
PMF5007V	20 SLM, 1 to 5 V, Linear
PMF5008V	40 SLM, 1 to 5 V, Linear
PMF5009V	60 SLM, 1 to 5 V, Linear

## **EUROPEAN DISTRIBUTOR**

BS-rep GmbH

Eichertstr. 68, D-56745 Weibern, Germany

Tel: +49 (0) 2655 / 96 26 476 Email: info@sensor-rep.de